

# STORAGE LOCKERS INSTALLATION INSTRUCTIONS

## DOUBLE TIER UNITS

STEP 1: INSTALL THE FIRST SIDE OF THE UNIT AS SHOWN IN THE DIAGRAM TO EXISTING WALL OR BACK PANEL.  
(USE PLASTIC MASONRY ANCHORS FOR ANCHORING TO CONCRETE). SHIM WITH WASHERS WHEN WALL SURFACES ARE UNEVEN. WHEN FLOORS ARE PITCHED, IT IS NECESSARY TO CUT OFF THE LEGS OF SIDE PANEL TO MAKE LEVEL.

STEP 2: INSTALL SECOND PANEL TO EXISTING WALL OR BACK PANEL, SAME AS IN STEP 1.

STEP 3: INSTALL PRE PUNCHED SHELF CHANNELS AS SHOWN IN DIAGRAM.  
IF MORE THAN ONE LOCKER GO AHEAD AND INSERT SHELF CHANNEL FOR NEXT LOCKER IN THE ROW NOW.

STEP 4: INSERT SHELF SECTIONS INTO THE SHELF CHANNELS.

STEP 5: BOLT THE CHANNEL OF DOOR FRAME TO THE ANGLE OF SIDE PANEL.


STEP 6: CONTINUE INSTALLING UNITS IN SAME MANNER AS IN STEPS 2 THRU 5.

STEP 7: WHEN ALL SIDES AND DOORS HAVE BEEN BOLTED TOGETHER,  
USE ANCHORS TO SECURE DOOR THRESHOLD.

STEP 8: WITH OPTIONAL ROOF PANEL BOLT ROOF PANEL SECTIONS  
TO TOP OF SIDE AND FRONT PANELS. (1, 2 OR 3 UNIT SECTIONS.)

NOTE: ALL INTER CONNECTING HARDWARE (FURNISHED,) WALL AND FLOOR ANCHORS BY INSTALLER.

BUY AMERICAN!!!

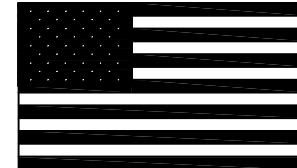


FILE: TSLEXPN

**jesco**  
— Since 1932 — ®


P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

DATE: 10/5/95 REV 3/22/00


# DOUBLE TIER STORAGE LOCKERS WITH 2 x 1 MESH

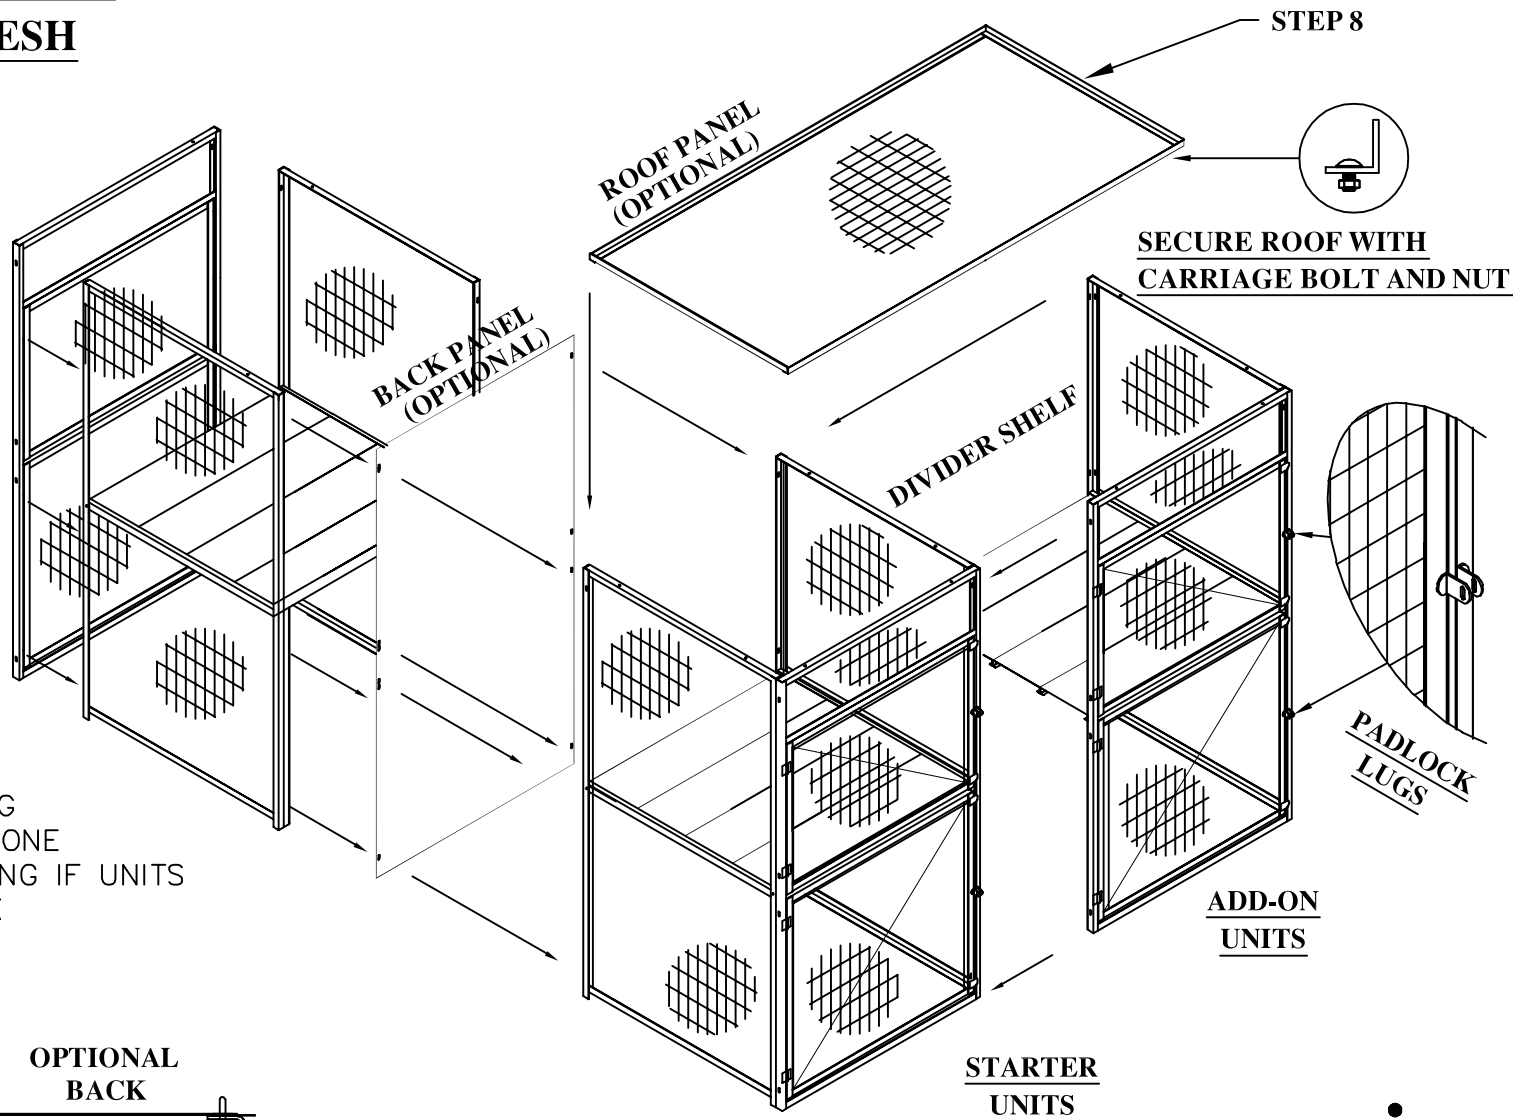

\* WIRE MESH BACKING  
IF UNIT STANDS ALONE  
SHEET STEEL BACKING IF UNITS  
ARE BACK TO BACK

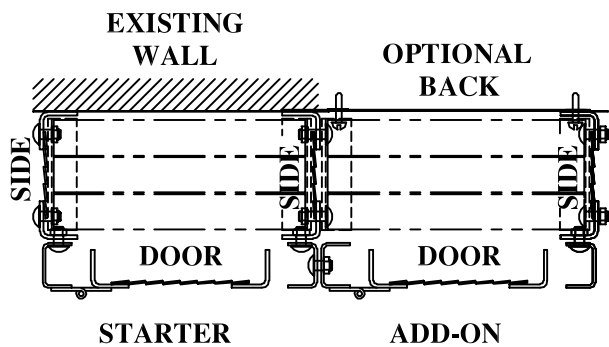


**BUY AMERICAN!!!**

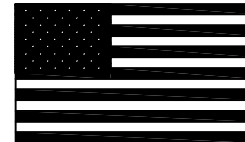


**jesco**  
— Since 1932 —<sup>®</sup>

P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

# DOUBLE TIER STORAGE LOCKERS

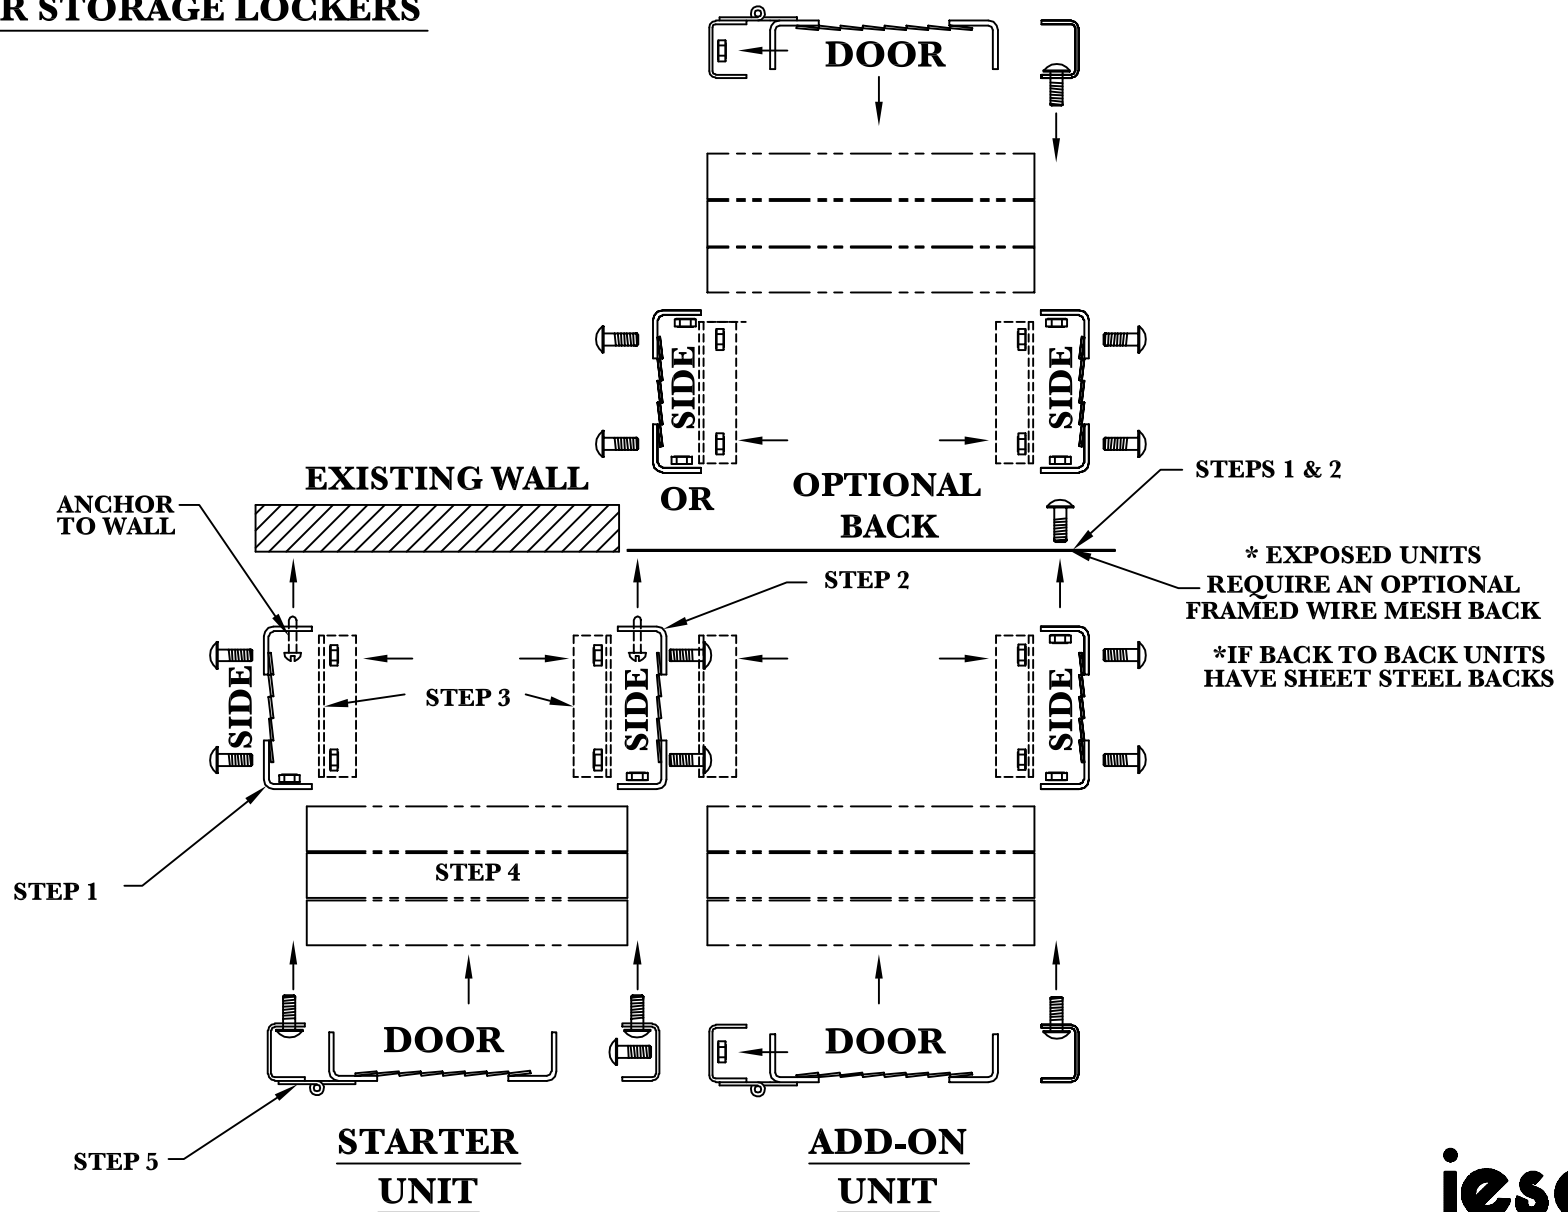

**BUY AMERICAN!!!**

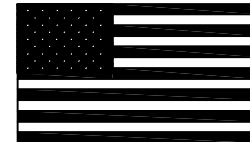

**jesco**  
— Since 1932 —<sup>®</sup>

P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903