

# STORAGE LOCKERS INSTALLATION INSTRUCTIONS

## SINGLE TIER UNITS

STEP 1: INSTALL THE FIRST SIDE OF THE UNIT AS SHOWN IN THE DIAGRAM TO EXISTING WALL OR BACK PANEL.  
(USE PLASTIC MASONRY ANCHORS FOR ANCHORING TO CONCRETE). SHIM WITH WASHERS WHEN WALL SURFACES ARE UNEVEN. WHEN FLOORS ARE PITCHED, IT IS NECESSARY TO CUT OFF THE LEGS OF SIDE PANEL TO MAKE LEVEL.

STEP 2: INSTALL SECOND PANEL TO EXISTING WALL OR BACK PANEL, SAME AS IN STEP 1.


STEP 3: BOLT THE CHANNEL OF DOOR FRAME TO THE ANGLE OF SIDE PANEL.

STEP 4: CONTINUE INSTALLING UNITS IN SAME MANNER AS IN STEPS 2 & 3.

STEP 5: WHEN ALL SIDES AND DOORS HAVE BEEN BOLTED TOGETHER, USE ANCHORS TO SECURE DOOR THRESHOLD.

STEP 6: WITH OPTIONAL ROOF PANEL BOLT ROOF PANEL SECTIONS TO TOP OF SIDE AND FRONT PANELS. (1, 2 OR 3 UNIT SECTIONS.)


NOTE: ALL INTER CONNECTING HARDWARE (FURNISHED,) WALL AND FLOOR ANCHORS BY INSTALLER.

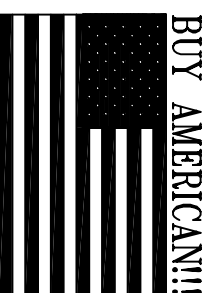


**jesco**  
— Since 1932 —  
®

P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

**SINGLE TIER  
STORAGE LOCKERS  
WITH 2 x 1 MESH**

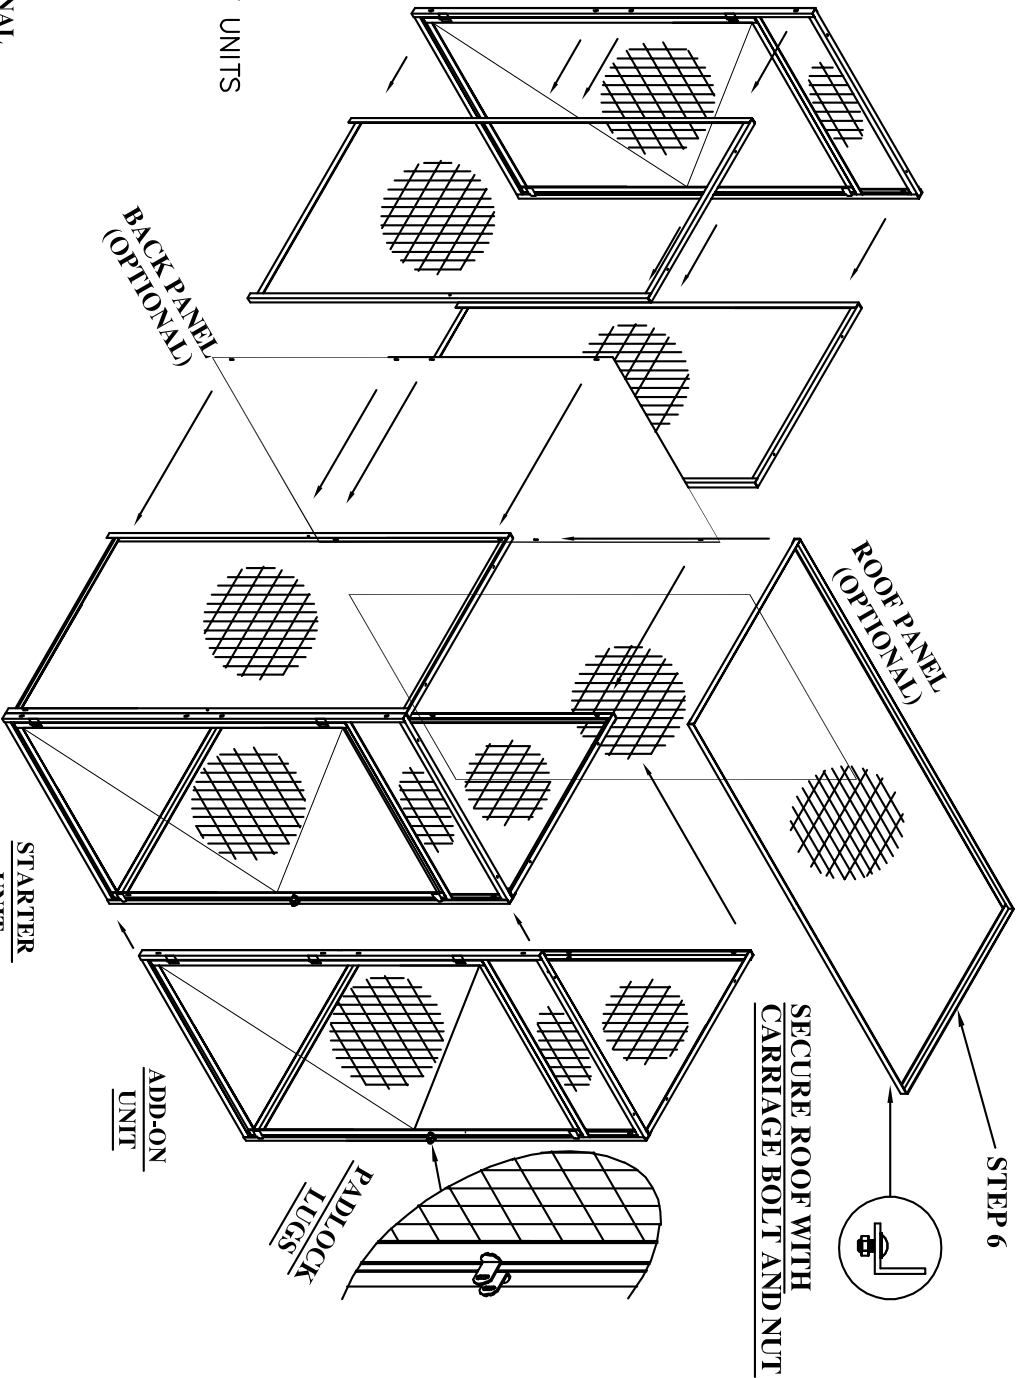

\* WIRE MESH BACKING  
IF UNIT STANDS ALONE  
SHEET STEEL BACKING IF UNITS  
ARE BACK TO BACK

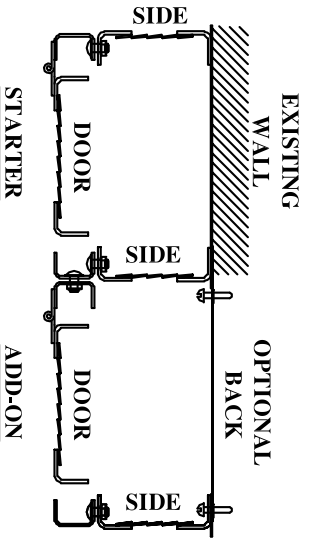


**jesco**  
— Since 1932 —

P. O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

FILE: TSL2X1WM1

DATE: 10/5/95 REV 03/22/00

# SINGLE TIER STORAGE LOCKERS

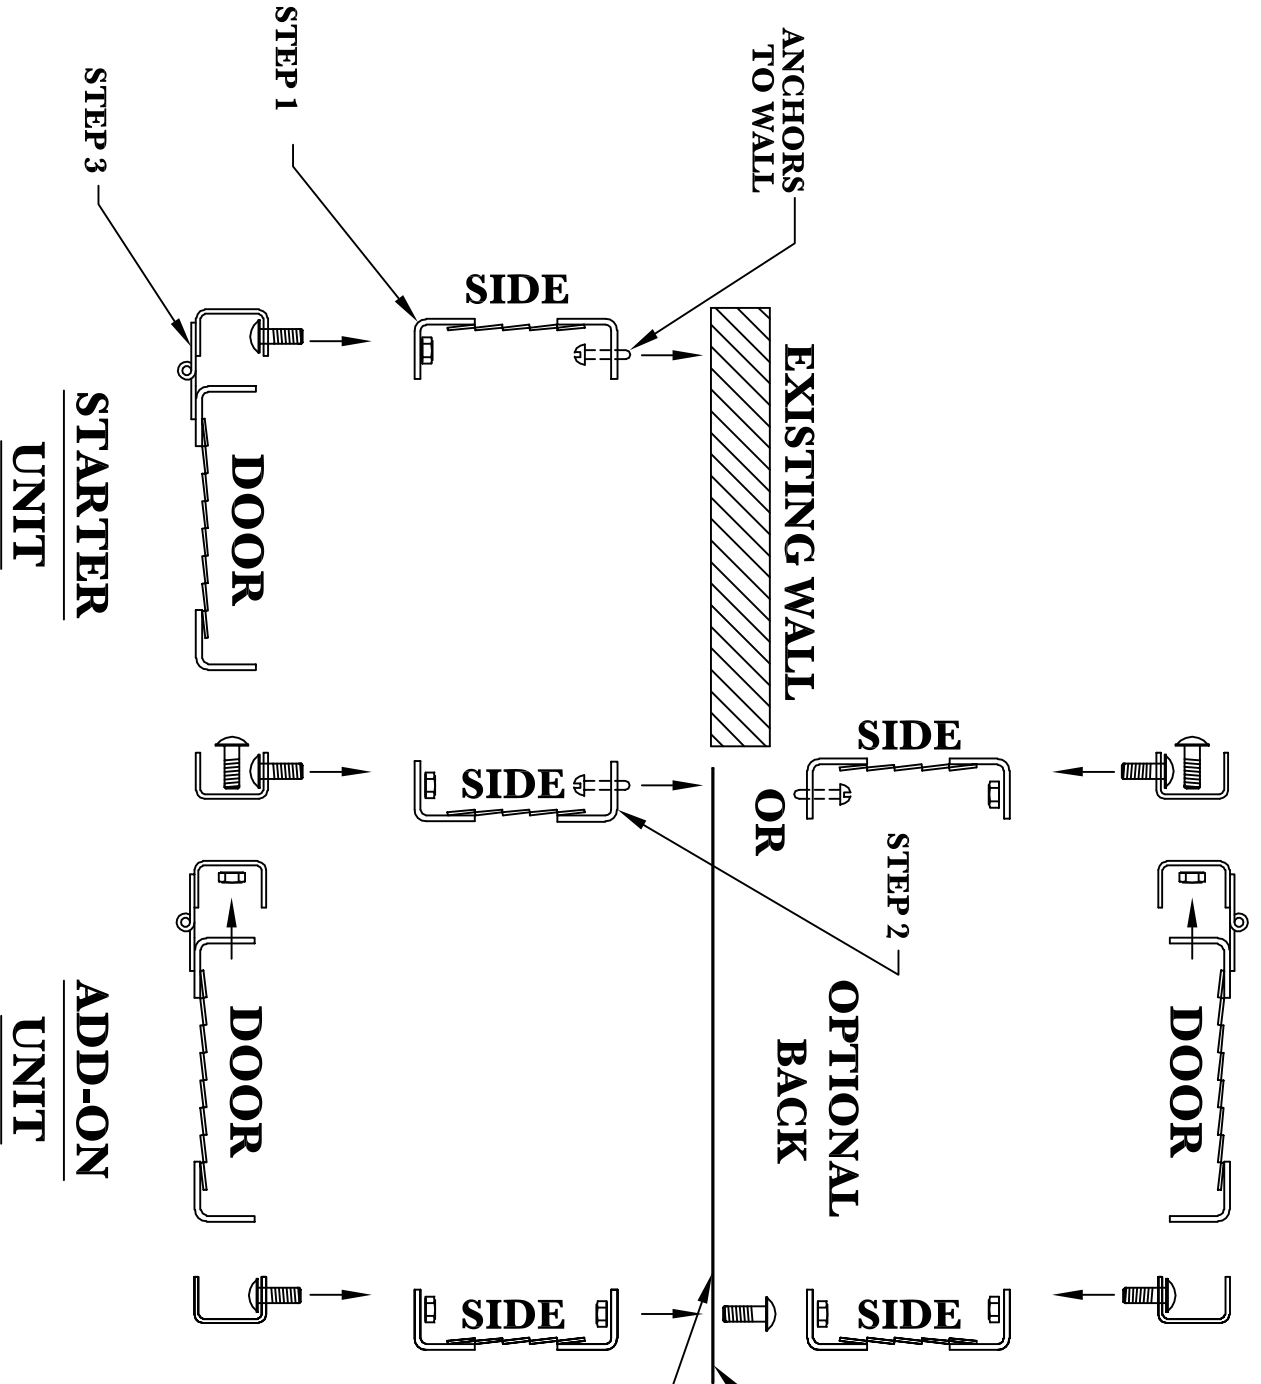

**\* EXPOSED UNITS  
REQUIRE AN OPTIONAL  
FRAMED WIRE MESH BACK**

**\*IF BACK TO BACK UNITS  
HAVE SHEET STEEL BACKS**

STEPS 1 & 2



BUY AMERICAN!!!

**jesco**  
— Since 1932 —  
®

P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI, 49252  
PH. # 1-517-542-2903