



SINGLE TIER  
STORAGE LOCKERS  
WITH 2 x 1 MESH

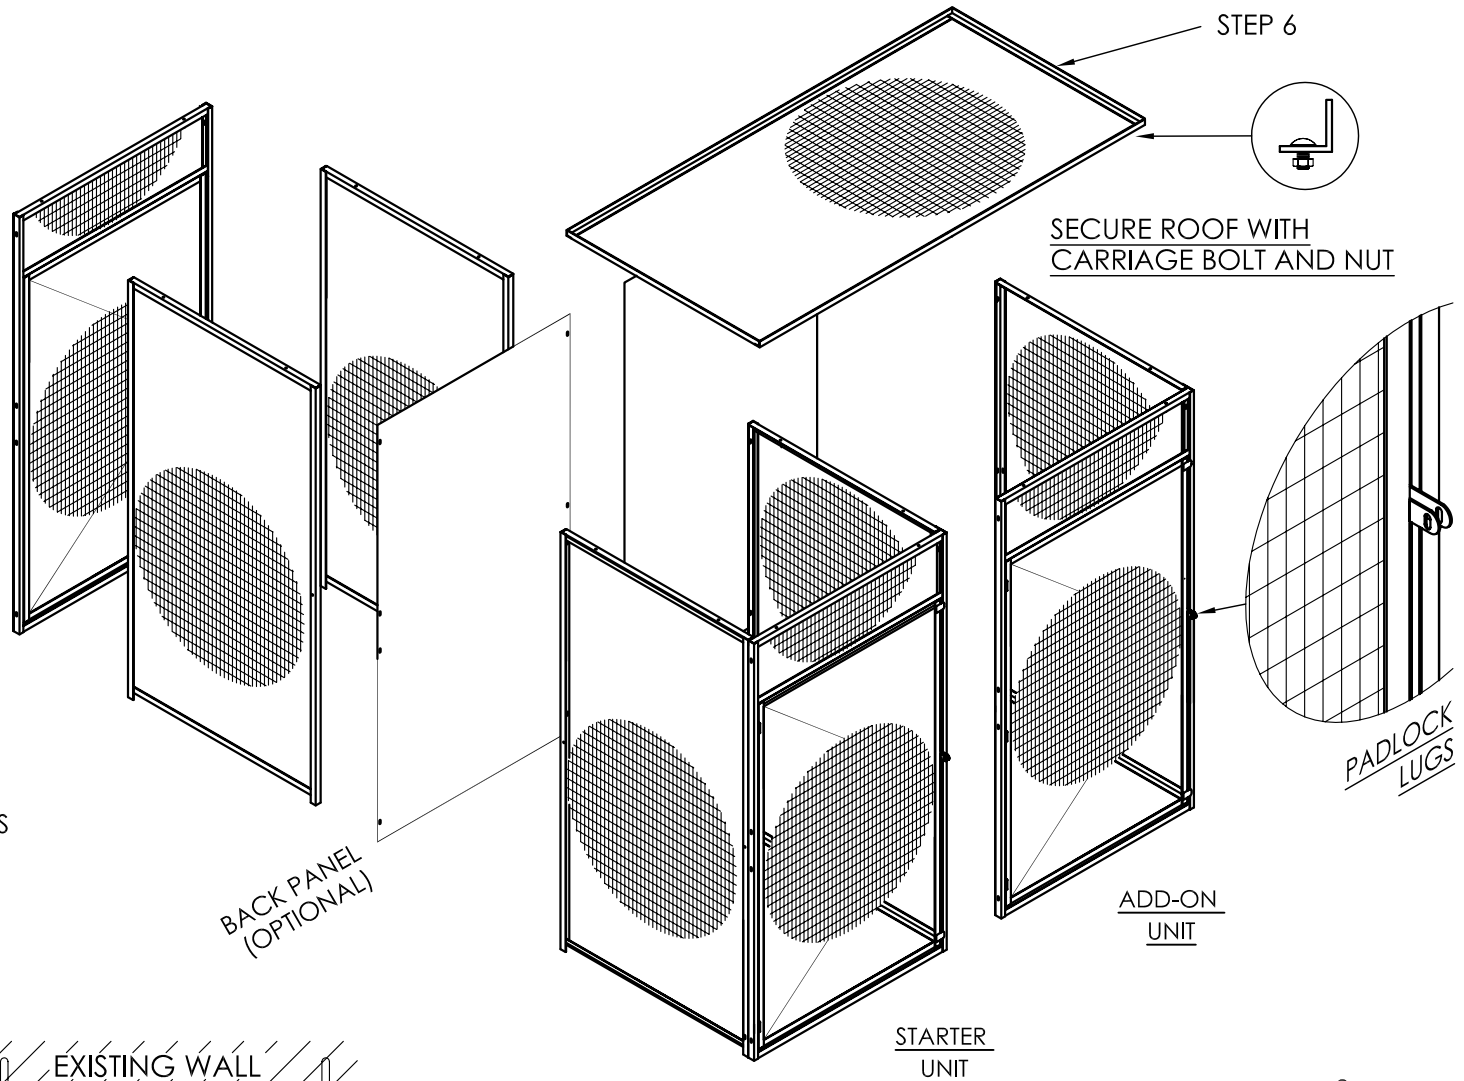

\* WIRE MESH BACKING  
IF UNIT STANDS ALONE  
SHEET STEEL BACKING IF UNITS  
ARE BACK TO BACK

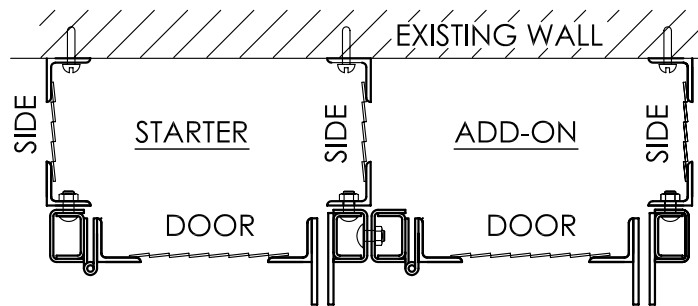

**BUY AMERICAN!!!**



**jesco**<sup>®</sup>  
~Since 1932~  
P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

# STORAGE LOCKERS INSTALLATION INSTRUCTIONS

## SINGLE TIER UNITS

STEP 1: INSTALL THE FIRST SIDE OF THE UNIT AS SHOWN IN THE DIAGRAM TO EXISTING WALL OR BACK PANEL.  
(USE PLASTIC MASONRY ANCHORS FOR ANCHORING TO CONCRETE). SHIM WITH WASHERS WHEN WALL SURFACES ARE UNEVEN. WHEN FLOORS ARE PITCHED, IT IS NECESSARY TO CUT OFF THE LEGS OF SIDE PANEL TO MAKE LEVEL.

STEP 2: INSTALL SECOND PANEL TO EXISTING WALL OR BACK PANEL, SAME AS IN STEP 1.

STEP 3: BOLT THE CHANNEL OF DOOR FRAME TO THE ANGLE OF SIDE PANEL.


STEP 4: CONTINUE INSTALLING UNITS IN SAME MANNER AS IN STEPS 2 & 3.

STEP 5: WHEN ALL SIDES AND DOORS HAVE BEEN BOLTED TOGETHER, USE ANCHORS TO SECURE DOOR THRESHOLD.

STEP 6: WITH OPTIONAL ROOF PANEL BOLT ROOF PANEL SECTIONS TO TOP OF SIDE AND FRONT PANELS. (1, 2 OR 3 UNIT SECTIONS.)

NOTE: ALL INTER CONNECTING HARDWARE (FURNISHED), WALL AND FLOOR ANCHORS BY INSTALLER.

**BUY AMERICAN!!!**


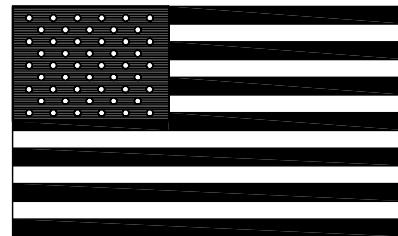


FILE: TSL INS1

**jesco**®  
~Since 1932~


P.O. BOX 388  
950 ANDERSON ROAD  
LITCHFIELD MI. 49252  
PH. # 1-517-542-2903

DATE: 10/5/95 REV 09/12/07

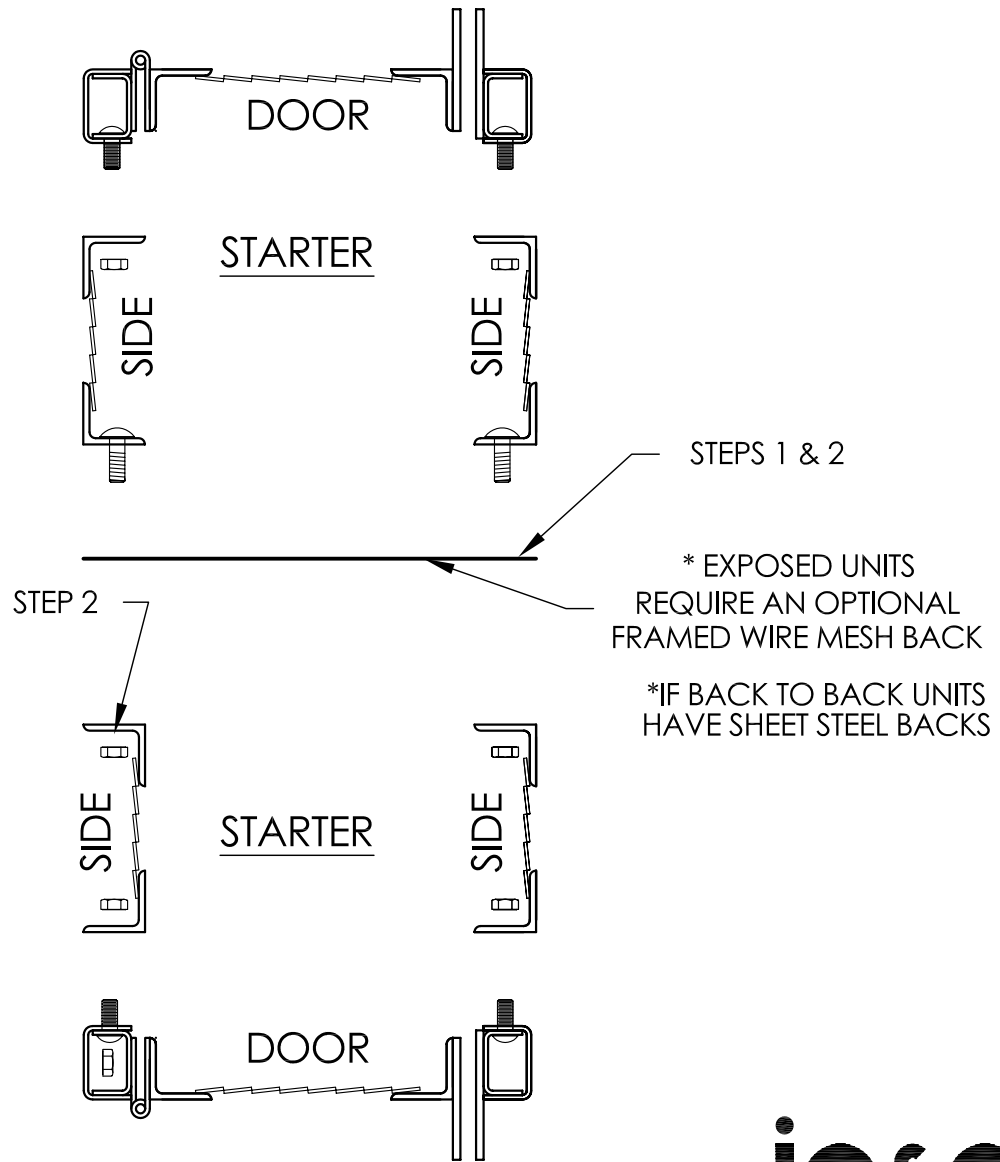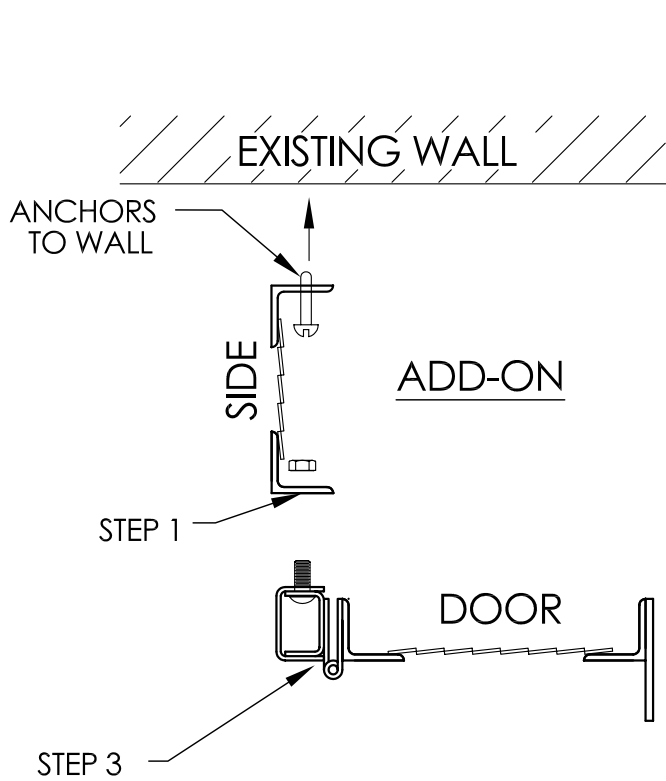

SINGLE TIER STORAGE LOCKERS

**BUY AMERICAN!!!**

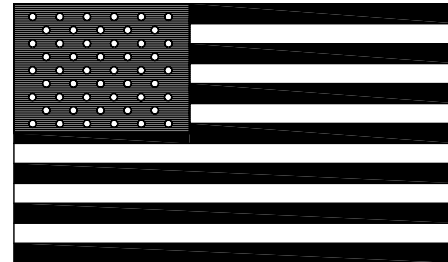

**jesco**®

~Since 1932~

P.O. BOX 388  
 950 ANDERSON ROAD  
 LITCHFIELD MI. 49252  
 PH. # 1-517-542-2903